DS370
37” Display
User Manual
(English)

Downloaded from www.Manualslib.com manuals search engine

Table of Contents

1 Safety Instructions ····· 3

2 How to Unpack ····· S

3 Package Contents ····· 6

4 How to Mount on a Wall ····· 7

4-1 Adjusting Directions ····· 7

4-2 Wall Mount Dimension Specification ····· 8

4-3 Installation on a Flat Wall ····· 9

4-4 Installation on a Recessed Wall ····· 9

S How to Use ····· 10

6 Input/Output Description ····· 12

7 OSD Description ····· 13

7-1 Remote Control Introduction ····· 13

7-2 OSD Setting Menu ····· 14

8 Product Specifications ····· 16

9 Troubleshooting ····· 19

Downloaded from www.Manualslib.com manuals search engine

1 Safety Instructions

- Please carefully read through and keep the following instructions for future reference before using the product.
- Please follow the product's usage guide.
- Make sure to check that the local power supply complies with product power requirements
- Do not block the ventilation pore on the rear of display, and ensure there is enough space around the display to allow for heat dissipation.
- Do not open the rear cover. Damage caused by improper use is not covered by warranty.
- Our company's software products are copyrighted. Do not copy without authorization.
- To avoid potential damage from happening and to increase the product's life time, please comply with the following points during installation and usage:

✧ Do not install the display near water, such as bathtubs or swimming pools. Do not install the display near a location that can be exposed to water, such as near a window.

✧ Do not install the display where it can be directly exposed to sunlight or strong beams. Overexposure to sunlight can cause damage to the display and strong beams will disturb the user's experience when viewing contents in the display.

✧ Do not install near any heat source, such as radiators, heaters, stoves or any other products that may generate heat (including sound amplifiers).

✧ Do not install the display on platforms or carts that are unstable, slanted or shaky. It may cause the device to fall, injuring people around it and damaging the display itself. We suggest consulting with professionals in the securing of the device.

✧ Always comply with all warnings and instructions labeled on the display.

✧ Do not install the display in a confined environment.

✧ If you wish to mount the display in a recessed TV wall mount, make sure to leave enough space around the display to ensure good ventilation to avoid working at an abnormal temperature.

Downloaded from www.Manualslib.com manuals search engine

- There is a very thin layer of glass on top of the display screen that is prone to cracks, scratches or even breaking. When under excessive pressure or temperature changes, special liquid crystal material may also be damaged.

- When the product's power is on, do not cover or block any of product's ventilation pores. It is suggested to periodically clean the product's ventilation pores to ensure heat dissipation.

- Keep candles or other flammable items away from the product to avoid risks of fire.

- Do not stick your finger or other objects in-between the product and its stand base or its neighboring area to avoid harming yourself or damaging the product.

- Do not press upon the product to avoid damaging the product's body.

Downloaded from www.Manualslib.com manuals search engine

2 How to Unpack

1. Before unpacking, make sure whether box is upright and not upside down, by checking whether the mark of the side of the box is pointing up.
2. Remove components case and buffer block on the left & right side.

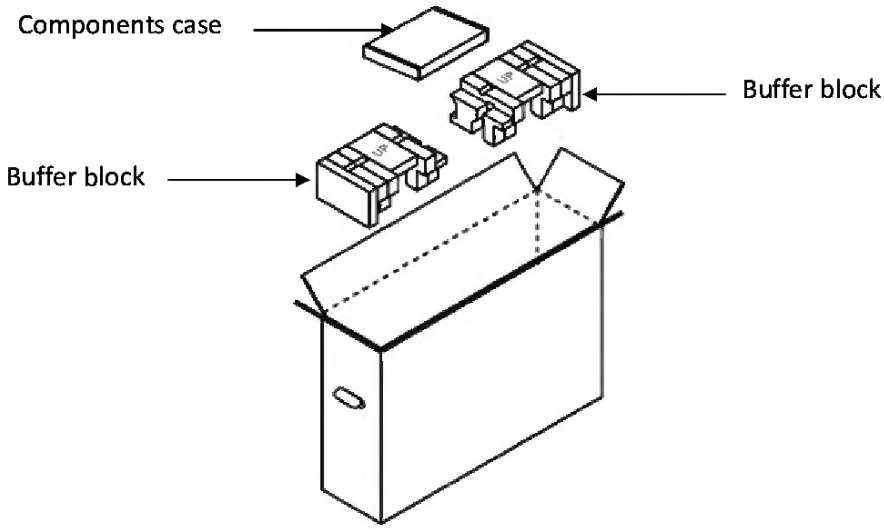

3. Then lift the display and remove the protective pouch.

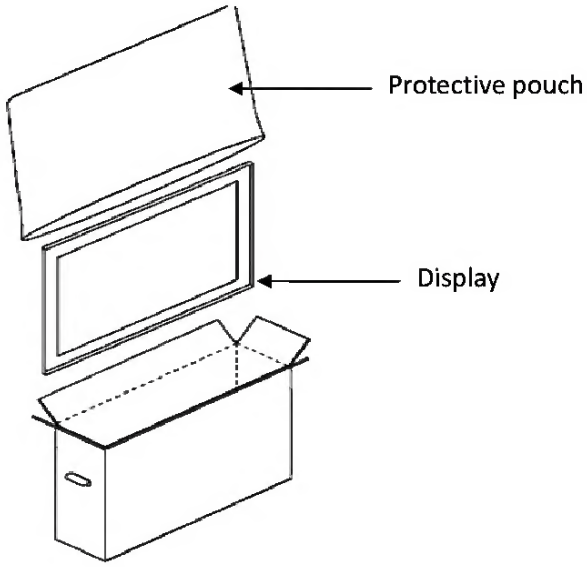

Downloaded from www.Manualslib.com manuals search engine

3 Package Contents

37" Display

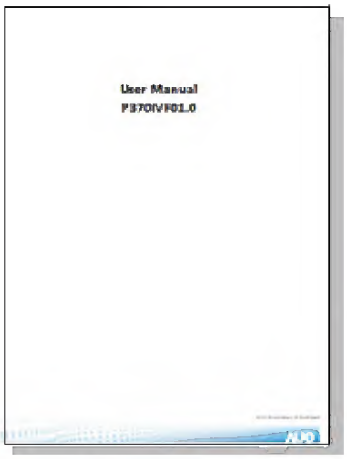

User's Manual (Chinese, English; one each)

Remote Control

Power Cord

Downloaded from www.Manualslib.com manuals search engine

4 How to Mount on a Wall

To avoid injuries, follow the installation instructions to safely install the device onto a wall.

- Allow a certified installation company to conduct the wall mounting operation.
- Or, dropping may cause injuries to people around.
- Wall mount is to be bought separately.

4-1 Adjusting Directions

If you wish to use the product vertically or horizontally, adjust the product such that the arrow marks on the back of the product is pointing up.

Vertical usage

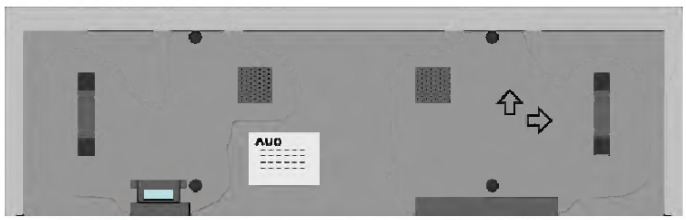

Horizontal usage

Downloaded from www.Manualslib.com manuals search engine

4-2 Wall Mount Dimension Specification

The back of the display is equipped with four screw-holes and matching tapped holes, and a VE5A dimension of 400mm x 200mm. Firmly secure using the 4 M6 screws on the device (M6 screws have a maximum length of 35mm).

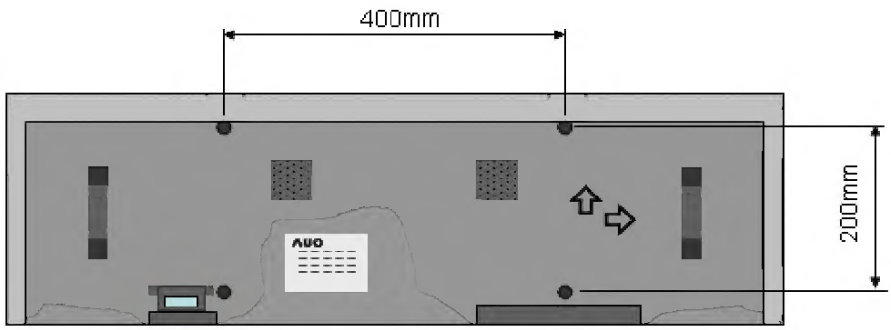

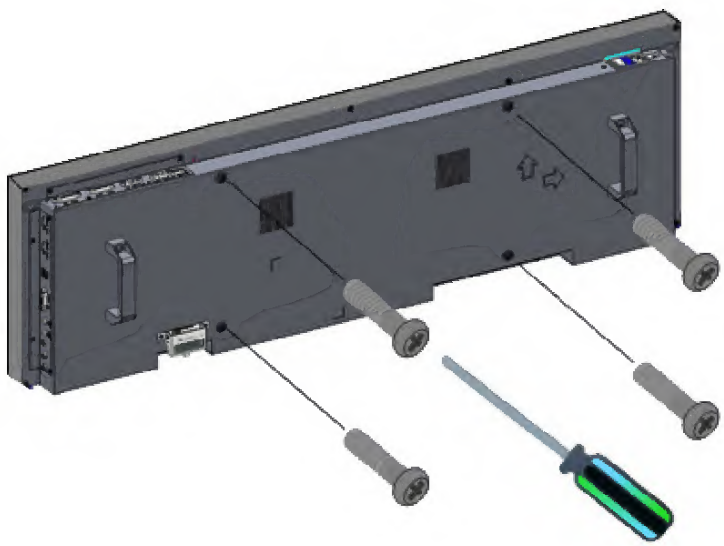

Downloaded from www.Manualslib.com manuals search engine

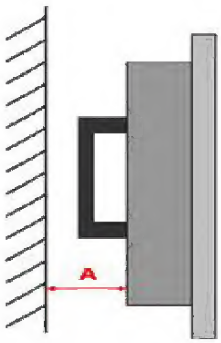

4-3 Installation on a Flat Wall: A Minimum distance 40mm.

When installing the device on a wall face, the product must be distanced at least 40mm from the wall for ventilation purposes.

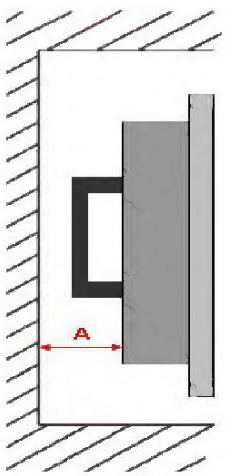

4-4 Installation on a Recessed Wall: A Minimum distance of 40mm.

When installing the device on a recessed wall, there has to be at least 40mm of space between the product the wall for ventilation purposes.

Downloaded from www.Manualslib.com manuals search engine

5 How to Use

1. Plug in the power cord.

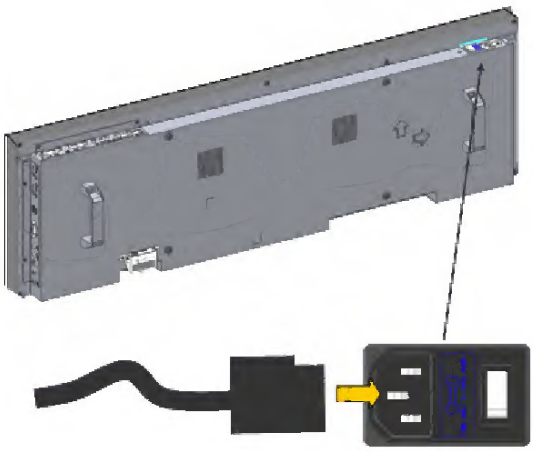

2. Turn on the power

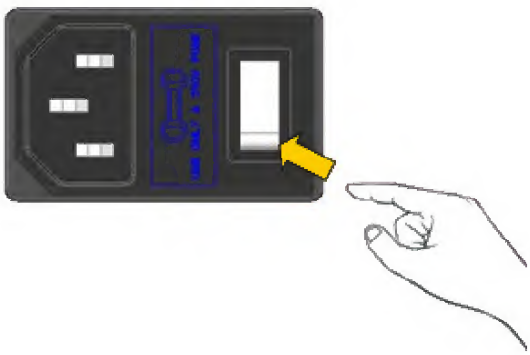

Downloaded from www.Manualslib.com manuals search engine

3. Aim the remote control at the IR receiver box, and push the Power On button (install the IR Box at a suitable location).

4. For choosing functions, please refer to Page 13 OSD menu.

Downloaded from www.Manualslib.com manuals search engine

6 Input/Output Description

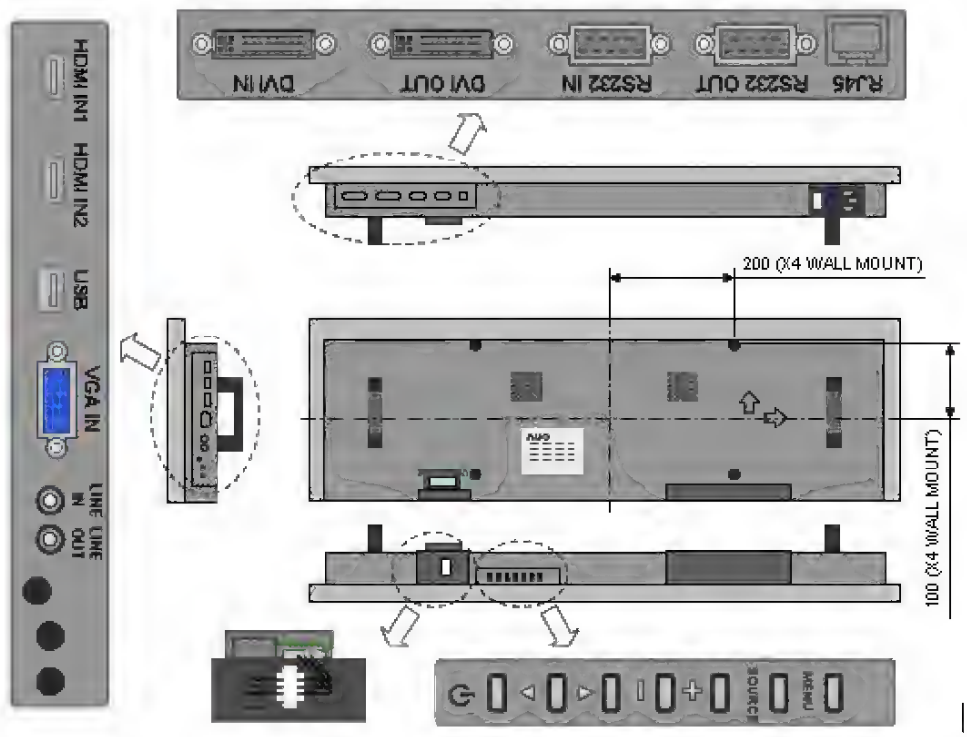

Downloaded from www.Manualslib.com manuals search engine

7 OSD Description

7-1 Remote Control Introduction

Key Name
INPUT
(電源)
1
2 / ABC
3 / DEF
4 / GHI
5 / JKL
6 / MNO
7 / PQRS
8 / TUV
9 / WXYZ
RECALL
0
ENTER --/-
影像模式
Sound Mod
畫面比例
Fre
Volume+
INFOR
Prog. + ▲
Volume-
Mute
Prog. - ▼
音量頻道
睡眠定時
環繞音效
TV Sound Type
▲
<
OK
>
▼
MENU
BACK
Red
Green
Yellow
Blue
SUBTITLE
(暫停)
(Stop)
(播放)
(上頁)
(下頁)
(倒帶)
(快轉)

Downloaded from www.Manualslib.com manuals search engine

7-2 OSD Setting Menu

Press "MENU" to enter the OSD setting menu, choose the item by using the Up and Down button, and press "EXIT" to leave the menu.

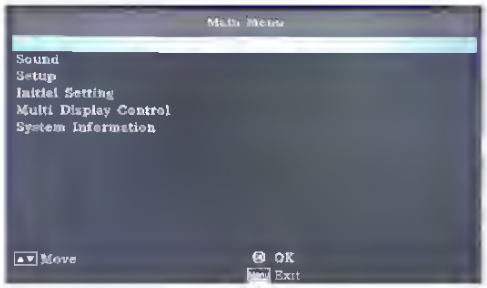

Main Menu :

- Picture: Adjust screen image setting
- Sound : Adjust sound setting
- Setup: Designate screen parameters
- Initial Setting: Advanced item setting
- Multi Display Control: 37 Bar Display is not supported
- System Information: System information

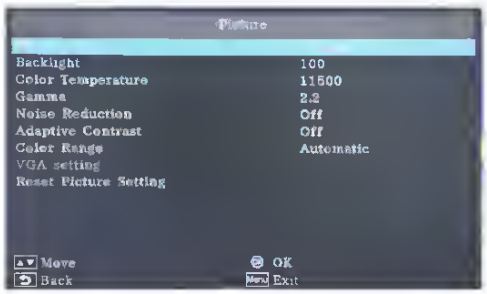

Picture:

- Picture Mode : Dynamic/ Standard/ Advertiser/ Custom
- Backlight: Backlight brightness 0-100
- Color Temperature : 6500K/ 9300K/ 11S00K/ Advertiser/ Custom
- Gamma : 2.2/ 2.4/ Native
- Noise Reduction : on/ off
- Adaptive Contrast : on/ off
- Color Range : 0~2S5/ 16~235/ Automatic
- Reset Picture Setting

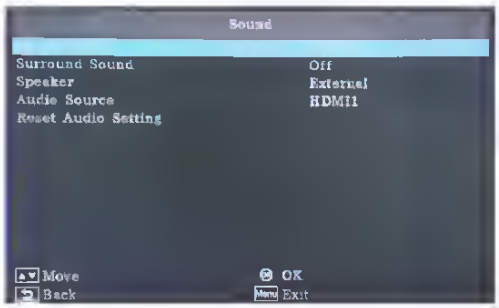

Sound:

- Sound Mode: Dynamic/ Standard/ Custom
- Surround Sound: on/ off
- Speaker : Internal/ External
- Audio Source: Line In/ Source (HDMI1, HDMI2...)
- Reset Audio Setting

Downloaded from www.Manualslib.com manuals search engine

Setup:

- Scheduler
- Control Setting : RS232/ LAN/ off
- Standby Mode : Eco/ Normal
- Ethernet Setting
- Sleep Timer : 5/15/30/60/90/120/180(mins)/off
- Power Save : 30/60/90/120/150/180/210/240/270/300(Secs)/off
- Software Update(USB)
- Restore Default

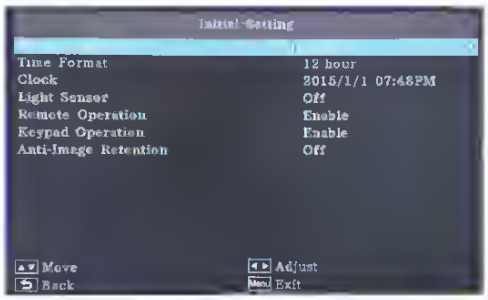

Initial Setting:

- Menu Language: English/ Français / Deutsch/ Español/ Italiano / Svenska/ Japanese / Simplified Chinese
- Time Format : 12-hour/ 24-hour
- Clock
- Light Sensor : on/ off
- Remote Operation
- Keypad Operation
- Anti-Image Retention : Picture Shift/ off

Downloaded from www.Manualslib.com manuals search engine

8Product Specifications

Panel	LCD Size	37”
	LCD Vendor	AUO
	Light Source	LED
	Active Area (mm)	904.32(H) x 2S4.34(V)
	Resolution	FHD 1920 x S40 (pixels)
	Aspect Ratio	16:4.S
	Brightness (typ)	1000 cd/m2
	Contrast Ratio (typ.)	4000:1
	Response Time (ms)	6.S
	Frame Rate	60
	Viewing Angle	178 degree (H) / 178 degree (V)
	Light Life (typ)/(min)	70,000 hrs (typ.) / S0,000 hrs (min)
	Panel Surface	Anti-Glare, 3H, Haze 44%
	Color gamut (x% NTSC)	72%
	Display Color	10 bit (8bit+FRC), 1073.7M

Downloaded from www.Manualslib.com manuals search engine

Display	Dimension (Lx W x D mm)	923.3 X 277.1 X 92.65 mm (with handle)
	Weight	8.1 kg
	Border width (U/D/R/L)	9.8 / 9.8 / 7.9 / 7.9 mm
	Wall Mounting	400mmX200mm
	Package size (W x H x D)	1062x411x155 mm
	Package weight	10.5 KG
	Horizontal Frequency	35.1 kHz
	Vertical Frequency	60Hz
	Input Frequency	1920X540@60Hz (Analog)
		1920X540@60Hz (Digital)
	DDC	DDC2B
	Basic I/O	HDMI x2 (In), DVI x1 (In), VGA x1 (In), DVIx1(Out)
	Other I/O	RS232 (In)x 1, IR remote control (with light senser) x 1, RJ45 x 1, U5B x 1(In) RS232 x 1(Out)
	Audio	Audio in x 1, Audio out x 1
	Audio W (Amp)	5W x 2
	O5D Control	R5232, IR remote control, RJ45 controller
	O5D Language	English/ French / German / 5panish / Italiano / 5wedish / Japanese /5implified Chinese

Downloaded from www.Manualslib.com manuals search engine

Power	Power supply	AC 100V~240V (50/60Hz)
	Power consumption (Watt)	70W
	Standby Power (Watt)	<0.5W

Environment	Operation Temp (℃)	0°C ~ 40°C
	Storage Temp (℃)	-20°C ~ 60°C
	Display Orientation	Landscape / Portrait
	Usage (hrs/days)	24/7

Accessory	Power Cord	X1
	Remote Control	X1

Downloaded from www.Manualslib.com manuals search engine

9 Troubleshooting

- My device has no image?

1. Check whether the power cord is connected.
2. Check whether the switch is on.
3. Check whether the IR receiver on the side displays a red light. If there is red light signal, then use the remote control to turn the power on.

Downloaded from www.Manualslib.com manuals search engine